
1:72 707-120B Wing Glove Template

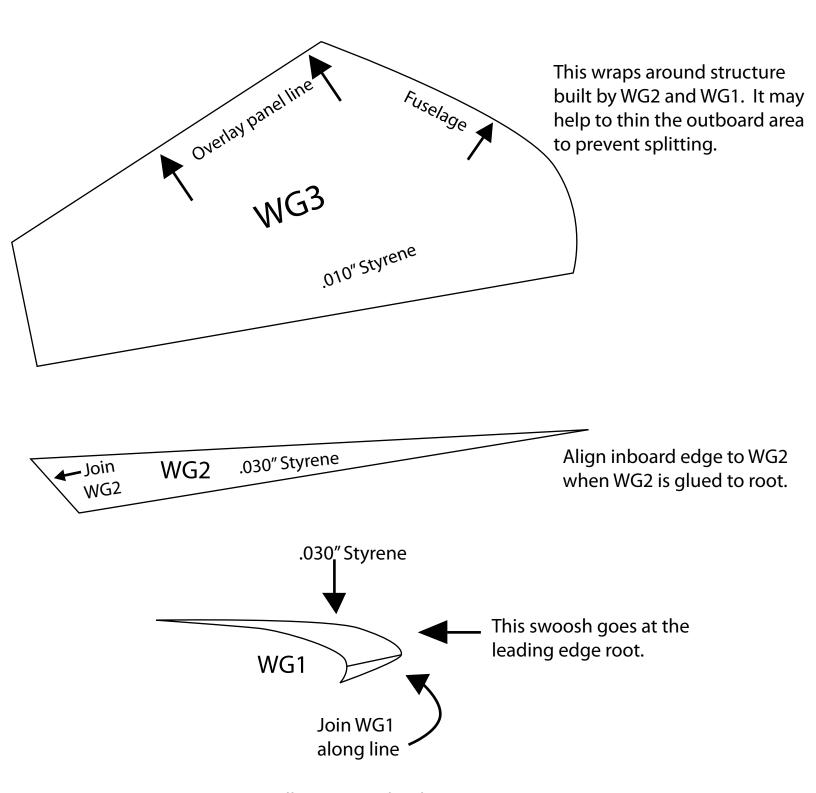

Once all parts are glued, putty any gaps, taking care not to deform WG3. If WG3 get deformed, add very thin putty layers to restore shape.